

Span Scaffolds

⚠ WARNING ⚠

Before using UpRight Scaffolds, read, understand and follow all Safety Rules, Erection Instructions and Maintenance Rules. Keep this manual for future reference. It contains important safety information! Failure to properly erect, dismantle and use Span Scaffolds may lead to death, injury or property damage. Scaffolds shall be erected, moved and dismantled only by, or under the supervision and direction of, a competent person.

SAFETY RULES

⚠ DANGER ⚠

ELECTROCUTION HAZARD. This is a metal scaffold and its components can conduct electricity. **DO NOT** use near energized electrical circuits. Serious injury or death will result if contact is made.

⚠ WARNING ⚠

- NEVER** use any UpRight Scaffold or scaffold component that is damaged.
- NEVER** use any UpRight Scaffold that is improperly erected. (See "Inspection and Maintenance" on page 2).
- NEVER** mix scaffold components from other manufacturers with UpRight Scaffold components. Component dimensions differ from one manufacturer to another and using components from more than one manufacturer in a single scaffold could be hazardous.
- ALWAYS** be sure the scaffold is level at all times. When a leg is adjusted, be sure the locking collar is completely pushed over the expanding nut and below the safety locks (See Figure 1, page 3).
- NEVER** make leg adjustments with anyone on a platform.
- ALWAYS** lock all four caster brakes before climbing the scaffold (see Figure 1, page 3).
- ALWAYS** make sure all locking hooks are firmly in position and latches are properly engaged. Never force locking hooks.
- ALWAYS** ensure that latches of all locking hinges on folding braces are locked (see Figure 2, page 3).
- ALWAYS** make sure interlock clips are properly inserted when extension end frames are used (see Figure 3, page 3), **NEVER** use damaged interlock clips.
- ALWAYS** use at least two diagonal braces and one horizontal brace properly installed on each weight-bearing section of Single-Width Span Scaffold. Double Width Span Scaffolds require double bracing.
- NEVER** install a horizontal brace of a span scaffold at the same level as the intersection of diagonal braces.
- ALWAYS** use four **OUTRIGGERS** if platform height will exceed three (3) times any minimum base dimension (see Figure 4, page 3). Height must not exceed three (3) times the minimum base dimension.
- ALWAYS** install **GUARDRAILS** on single-width scaffolds and on double-width scaffolds. Check State and Local Codes and Regulations for additional requirements.
- ALWAYS** install **TOEBOARDS** when platform height is 10ft (3M). Check State and Local Codes and Regulations for additional requirements.
- NEVER** increase platform height with the adjustable legs. Use leg adjustment for leveling the scaffold.
- NEVER** stand on guardrails or use guardrail components to gain extra height.
- NEVER** place ladders chairs, boxes or any other objects on a scaffold platform to gain additional height. When additional height is required, add more scaffold sections.
- NEVER** lean a ladder against a scaffold.
- NEVER** climb or stand on diagonal or horizontal braces.
- NEVER** move a scaffold when any person or materials are on the platform (See OSHA 1910.28 [A5]).
- NEVER** try to pull yourself or the scaffold from one place to another while on the platform. **ALWAYS** climb down from the platform and reposition the scaffold.

Safety Rules

CAUTION

ALWAYS ensure the work area is free of hazards such as debris and openings or holes in the surface where the scaffold will be used. Use only a firm level surface capable of supporting the scaffold and its load.

NEVER use a scaffold without first inspecting it. Prior to use, every user of an UpRight Scaffold must thoroughly inspect the scaffold prior to use. All required components must function properly and be properly attached as part of a properly erected scaffold. Any incomplete part, missing label, missing part or part that does not fit properly must be replaced prior to use of the scaffold.

NEVER use a hammer or other object to strike a component while attempting to erect, disassemble or adjust a scaffold. The components of a properly configured UpRight Scaffold should not require the application of force during the erection or disassembly process.

Handle all scaffold parts carefully. Do not throw or drop onto hard surfaces or allow heavy objects to fall onto the scaffold or scaffold components.

NEVER exceed the maximum distributed platform capacity of 500 lbs (227 Kg). Maximum distributed load is 25 lbs/ft² (122 Kg/m²) on any platform and 3000 lbs (1361 Kg) total on any base section. When adjustable legs are extended the maximum capacity is 1,600 lbs (726 Kg).

NEVER allow loose objects to accumulate on the platform during use. Always keep the platform free of all tripping hazards. Make sure the scaffold is free from slippery or hazardous materials such as paint or mud.

NEVER leave the scaffold unattended.

ALWAYS contact UpRight for instructions if you any questions (see BackCover). **NEVER TAKE CHANCES.**

INSPECTION AND MAINTENANCE

Following Use, inspect all scaffold components before storage. All damaged or worn parts and labels and parts not working properly must be repaired or replaced. Parts which cannot be restored to properly usable condition must be discarded.


SCAFFOLD MAINTENANCE

- All parts of UpRight Scaffolds should fit together easily and work properly. To ensure proper function, keep all scaffold components clean. All parts should be clean and free of any foreign build up. Use soap and water. Do not use caustic cleaner.
- The legs and sockets of scaffold end frames, where sections join each other should fit together properly, without interference. Legs and sockets must be kept clean. Lubricate end frame legs and sockets and spring pins with light machine oil as necessary.
- The inside surface of Brace Hooks and Spring Loaded Pins should fasten in place without forcing or binding. Keep the inside surface of Brace Hooks clean.
- Locking Hinge mechanisms should lock and unlock properly. Keep Locking Hinge mechanisms lubricated.
- Adjustable legs must slide freely inside the base frame vertical tubes. Remove any dirt or paint from the threads of the Adjustable Legs. Brush lightly if cleaning is necessary.
- Casters must be checked for worn or damaged wheels and missing or damaged snap rings. Wheels should spin freely and bearing races should turn freely and smoothly. Keep casters cleaned and lubricated. Axles, bearing races and stems must be lubricated with light machine oil. Damaged casters must be discarded.

Platforms must be checked for loose or missing components, holes or thin spots where boards may be worn. Worn or damaged boards must be replaced.

ADJUST LEGS AND LOCK CASTERS

Figure 1: Adjusting Legs and Casters

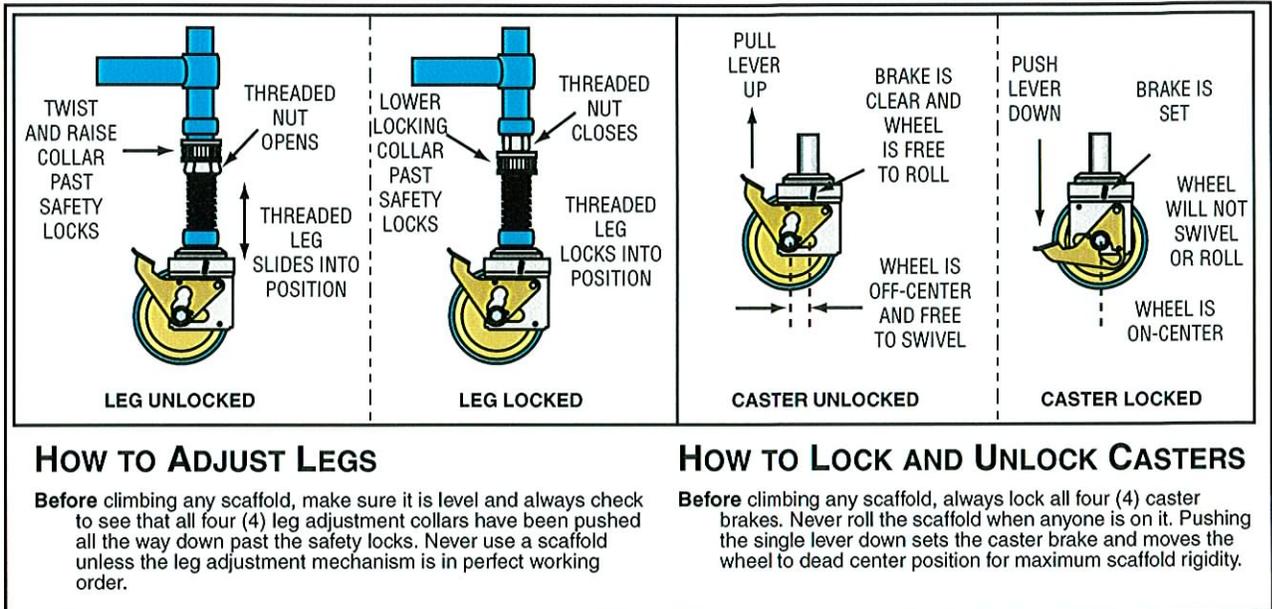

LOCKING HINGES AND INTERLOCK CLIPS

Figure 2: Locking Hinges

Make sure spring-actuated latches have moved into full locking position before using the scaffold. Do not use the scaffold if any of the latches are not working properly.


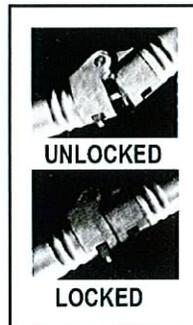



Figure 3: Interlock Clips

Make sure pin on interlock clips is seated in the locking hole.

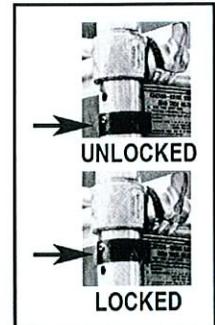




















OUTRIGGERS

Figure 4: Outriggers

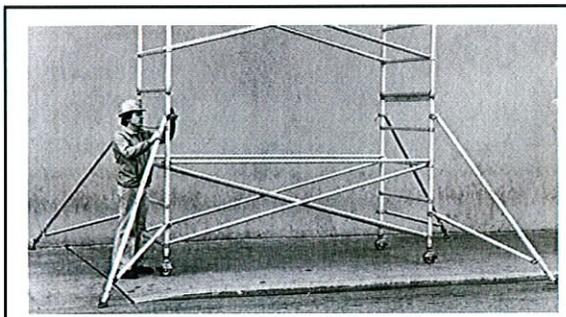


1. Always use outriggers if platform height is more than three (3) times any minimum base dimension.
2. For single wide scaffold, outriggers are required for platform heights above the base section (6' 6").
3. For double wide scaffolds, outriggers are required for platform heights above 13' 6".

SCAFFOLD COMPONENTS

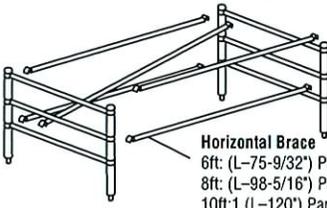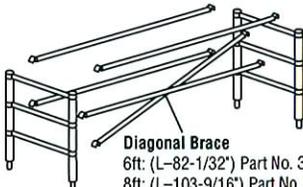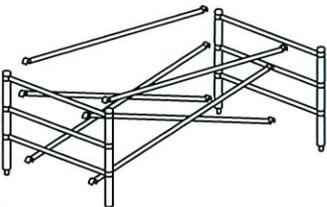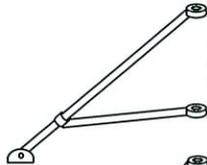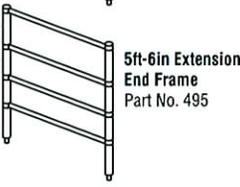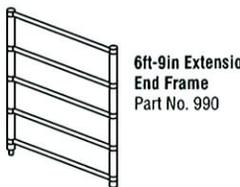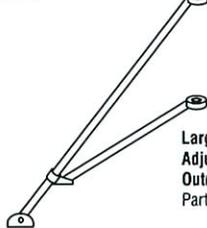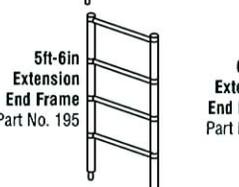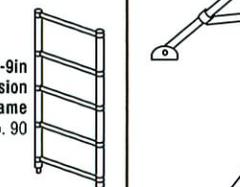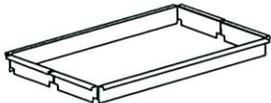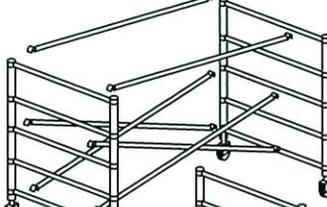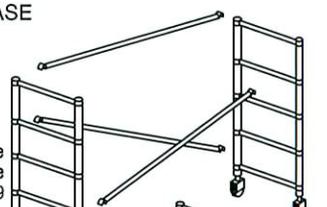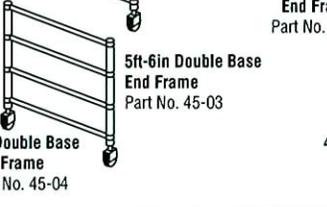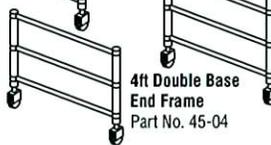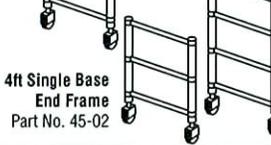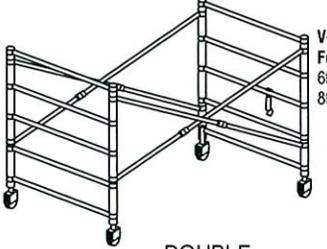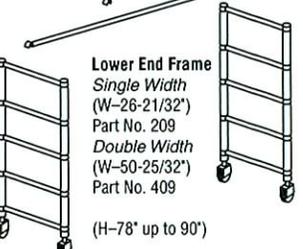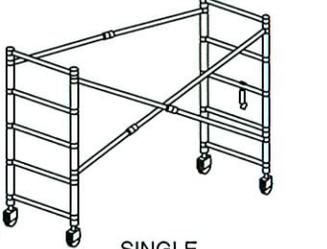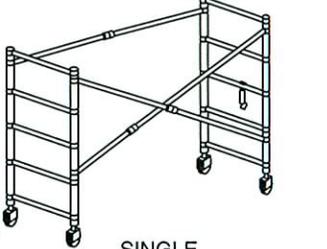
 <p>GUARDRAIL Guardrail Frame Part No. 470</p> <p>Horizontal Brace 6ft: (L-75-9/32") Part No. 223 8ft: (L-98-5/16") Part No. 105 10ft: (L-120") Part No. 221</p>	 <p>Guardrail Frame Part No. 270</p> <p>Diagonal Brace 6ft: (L-82-1/32") Part No. 364 8ft: (L-103-9/16") Part No. 365 10ft: (L-124-11/32") Part No. 210</p>	<p>INTERLOCK CLIPS</p>  Interlock Clip Part No. 167
<p>HEIGHT EXTENSIONS</p>  4ft Extension End Frame Part No. 466		<p>OUTRIGGERS</p>  Adjustable Outrigger Part No. 430
 5ft-6in Extension End Frame Part No. 495	 6ft-9in Extension End Frame Part No. 990	 Large Adjustable Outrigger Part No. 1490
 5ft-6in Extension End Frame Part No. 195	 6ft-9in Extension End Frame Part No. 90	
<p>TOEBOARDS</p>  Double Width (Wood) 6ft: Part No. 9616 8ft: Part No. 9618 10ft: Part No. 9620		<p>Casters & Base Plates</p> <p>Leg Lock Assembly Part No. 125 & 127</p>  Adjustable Leg Standard Part No. 517 (L-20")
 Double Width (Aluminum) 6ft: Part No. 1316 8ft: Part No. 1318 10ft: Part No. 1320	 Single Width (Wood) 6ft: Part No. 9606 8ft: Part No. 9608 10ft: Part No. 9610	 Adjustable Leg VX Instant Part No. 206 (L-33")
 Double Width 2 Required	<p>PLATFORMS</p> <p>PLATFORM ASSEMBLY 6ft: (L-75-9/32") Part No. 93-01 8ft: (L-98-9/32") Part No. 94-01 10ft: (L-120") Part No. 95-01</p>  Single Width 1 Required	 5in. Caster Part No. 5061
<p>STANDARD BASE</p>  6ft-6in Double Base End Frame Part No. 409		 Swivel Base Plate Part No. 325
 6ft-6in Single Base End Frame Part No. 209	 5ft-6in Double Base End Frame Part No. 45-03	 8in. Caster Part No. 9600
 4ft Double Base End Frame Part No. 45-04	 4ft Single Base End Frame Part No. 45-02	<p>HIGH CLEARANCE SPAN</p> <p>HIGH CLEARANCE PLATFORM ASSEMBLY 6ft: (L-75-9/32") Part No. 40456 8ft: (L-98-5/16") Part No. 40408 10ft: (L-120") Part No. 41010</p> 
<p>V-X BASE</p>  V-X Double Width Folding Structure 6ft: Part No. 1061 8ft: Part No. 1081		 Lower End Frame Single Width (W-26-21/32") Part No. 209
<p>DOUBLE</p>  V-X Single Width Folding Structure 6ft: Part No. 920 8ft: Part No. 930	<p>SINGLE</p> 	<p>Double Width (W-50-25/32") Part No. 409 (H-78" up to 90")</p>

ERECTING INSTRUCTIONS - SINGLE WIDTH


V-X INSTANT SPAN SINGLE WIDTH SCAFFOLD - STEP 1

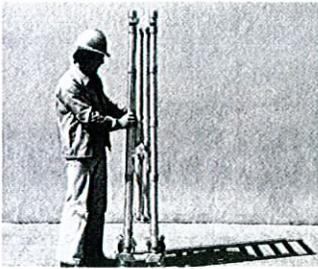


1. Unlock folding base unit

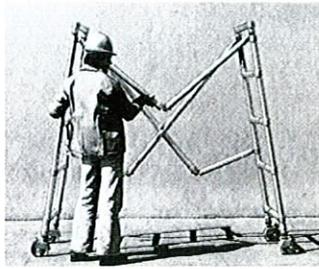

2. Open Outwards

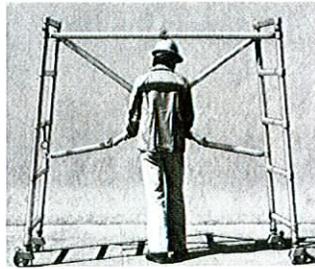


3. Lock Hinging Braces (see "Locking Hinges" on page 3).

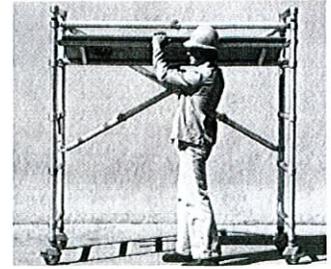


4. Install platform at desired height.


STANDARD SPAN SINGLE WIDTH SCAFFOLD - STEP 1

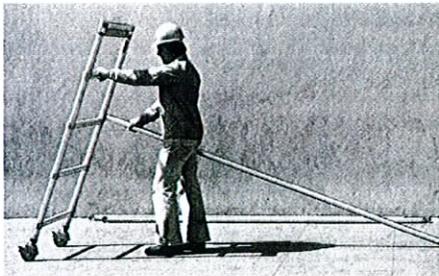

1. Snap short brace (horizontal) onto vertical tube of lower end frame. This supports the frame during installation of the other braces.

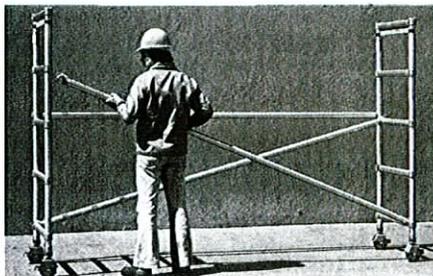


2. Snap long braces (diagonal) in desired position. Horizontal brace must be above or below intersection of diagonal braces.

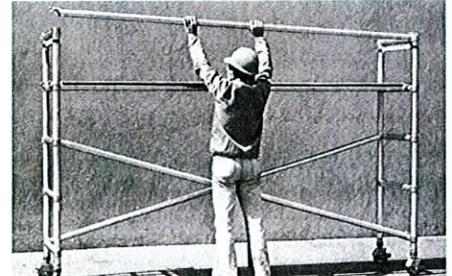


3. Install platform. Move horizontal brace to top rung.


SINGLE WIDTH SCAFFOLD - STEP 2

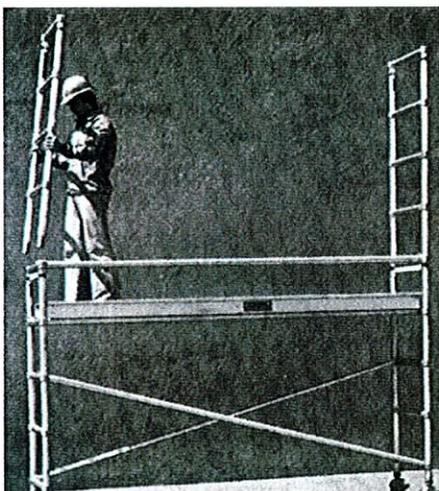

1. Lock all casters. Adjust legs to level platform. Insert extension frames. Interlock all frames by moving interlock clips from parking holes up to locking holes (see page 3).

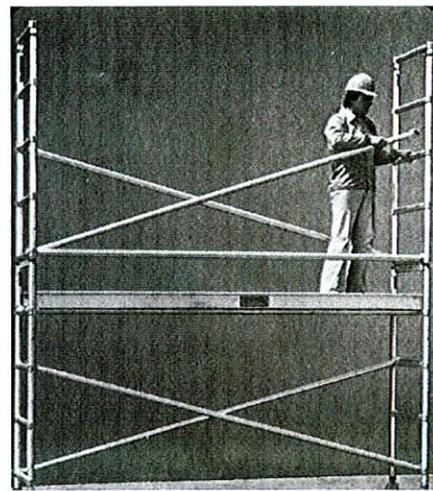


2. Snap diagonal braces in place.

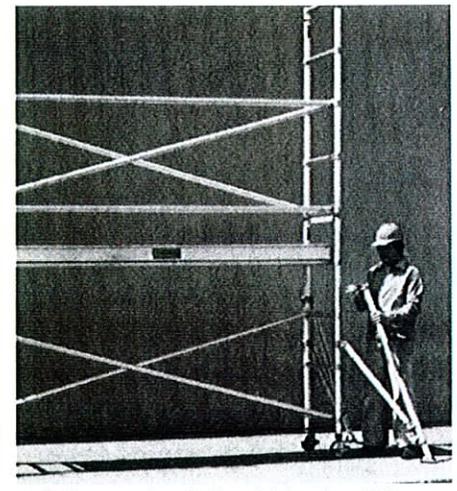


3. Before moving platform higher than 7 ft. (2,1m), tie the scaffold into the building or install outrigger on each corner. Make sure each outrigger is wedged against solid pavement and that all couplers are securely fastened.

ERECTING INSTRUCTIONS - DOUBLE WIDTH


V-X INSTANT SPAN DOUBLE WIDTH SCAFFOLD - STEP 1

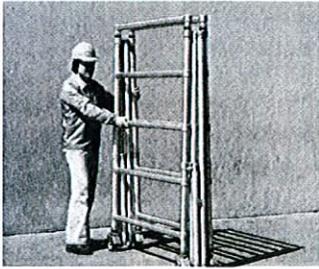


1. Roll the compact, 9.5in. (24cm) thick package to the place to be used.

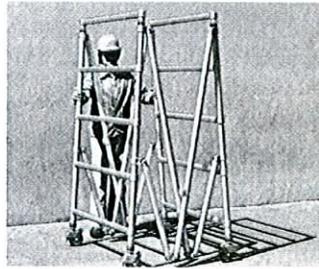

2. Release the locking hook which holds the unit together.

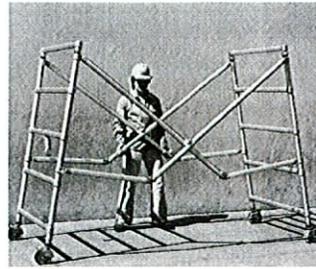


3. Roll end frames apart. Lock hinging braces (see page 5)

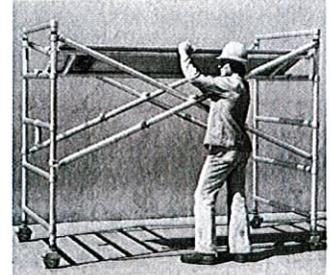


4. Install platforms


STANDARD SPAN DOUBLE WIDTH SCAFFOLD - STEP 1

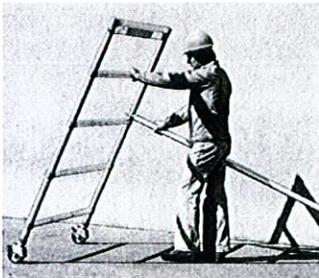


1. Snap short brace (horizontal) onto vertical tube of lower end frame.

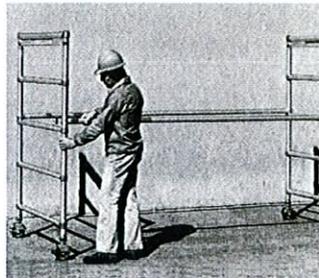

2. Snap horizontal braces onto vertical tubes of both lower end frames. These support the frames during installation of other braces.

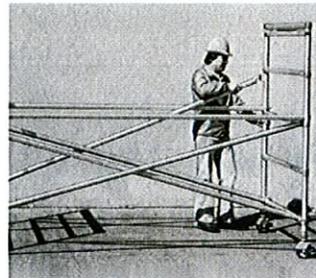


3. Snap four (4) diagonal braces between lower end frames. Be sure horizontal braces are installed above or below the intersection of the diagonals.

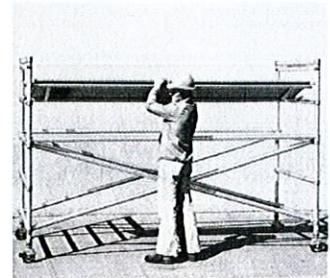


4. Install platforms at desired height.


DOUBLE WIDTH SCAFFOLD - STEP 2

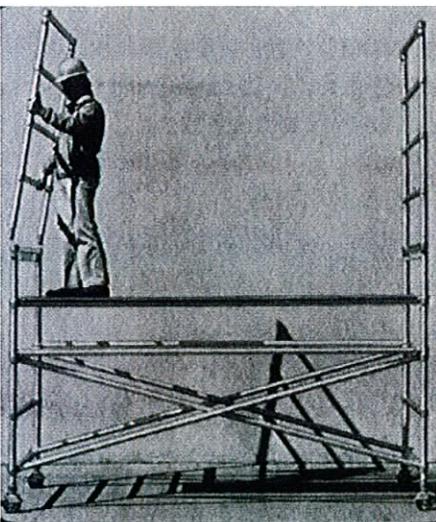

1. Lock all casters. Adjust legs to level platform. Insert extension frames; be sure each set of extensions includes four (4) diagonal braces and two (2) horizontal braces. Interlock all frames by moving interlock clips from parking holes up to locking holes (see page 3)


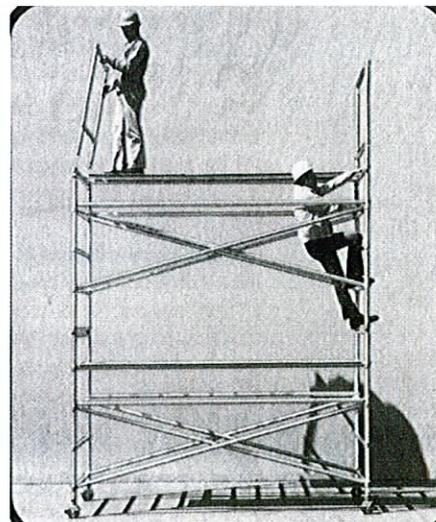


2. Install platforms. Add extension frames, diagonal braces and guardrail frames and braces.

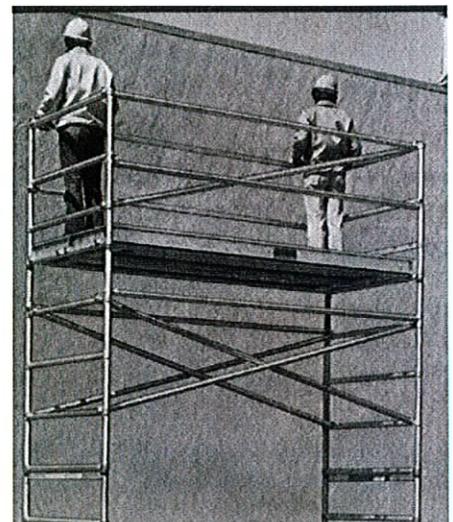

3. Install guardrail frames and toeboards. See page 7 for maximum heights.

HEIGHT TO BASE RATIO TABLES

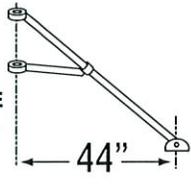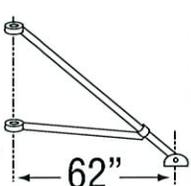	SINGLE WIDTH SPAN				DOUBLE WIDTH SPAN			
	SCAFFOLD WIDTH & LENGTH	LENGTH WITH STABILIZERS	WIDTH WITH STABILIZERS	MAXIMUM PLATFORM HEIGHT	SCAFFOLD WIDTH & LENGTH	LENGTH WITH STABILIZERS	WIDTH WITH STABILIZERS	MAXIMUM PLATFORM HEIGHT
430 ADJUSTABLE OUTRIGGER 	29" X 10"	10' - 0"	9' - 7"	28' - 6"	4' 6" X 10'	11' - 5"	11' - 5"	34' - 0"
	29" X 8"	9' - 5"	9' - 5"	28' - 6"	4' 6" X 8'	11' - 0"	11' - 0"	34' - 6"
	29" X 6"	9' - 0"	9' - 0"	27' - 0"	4' 6" X 6'	10' - 4"	10' - 4"	31' - 0"
1490 EXTRA LENGTH OUTRIGGER 	29" X 10"	12' - 4"	12' - 4"	36' - 6"	4' 6" X 10'	13' - 10"	13' - 10"	40' - 6"
	29" X 8"	11' - 11"	11' - 11"	35' - 0"	4' 6" X 8'	12' - 10"	12' - 10"	38' - 6"
	29" X 6"	11' - 4"	11' - 4"	34' - 0"	4' 6" X 6'	12' - 6"	12' - 6"	37' - 6"

These tables are calculated on the maximum platform height allowable, based on three (3) times the minimum base dimension with stabilizers attached.

UpRight SCAFFOLDS HAVE BEEN DESIGNED AND TESTED TO MEET OR EXCEED APPLICABLE OSHA AND ANSI REQUIREMENTS

USA

UpRight
2686 S. Maple Avenue
Fresno, CA, 93725

Telephone: (559) 443 6600
Toll Free: (866) 843-3350
Fax: (559) 268 1756
Email: info@uidistribution.com
www.uidistribution.com

CONTACT:

